MIDMARK® Installation Instructions

9A91002 & 9A18000X
Welch Allyn Light Bracket Kit

KIT COMPONENTS

Part Number	Description	Qty.
9A91002	Welch Allyn Bracket Kit (Model 404 & 405)	1
9A18000X	Welch Allyn Bracket Kit (Model 304)	1
003-0642-00	Installation Instructions	1

REQUIRED TOOLS

3/8 Wrench or Socket
Phillips Screwdriver
Power Hand Drill
7/32” Drill Bit
Measuring Tape

IMPORTANT INSTRUCTIONS

Provides a means to mount a Welch Allyn Light (48400 or 48600) on examination table. For light mounting procedures refer to information supplied with Welch Allyn 48400 or 48600 light package.

EQUIPMENT ALERT

Midmark supplies four additional #8-32 x 1/2” screws, lockwashers and nuts for mounting Welch Allyn light bracket to Midmark table bracket. Do not discard them.

INSTALLATION (1)

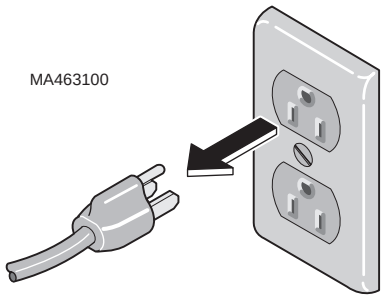

DANGER

Unplug chair from electrical outlet.

INSTALLATION (2)

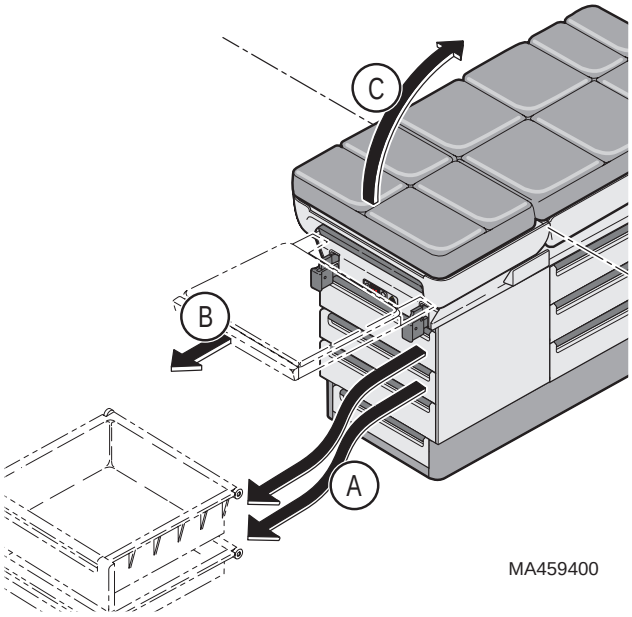

A. Remove two top drawers on foot end of table.
B. Pull footrest out to full extension.
C. Raise and support seat section.

INSTALLATION (3) (9A180)

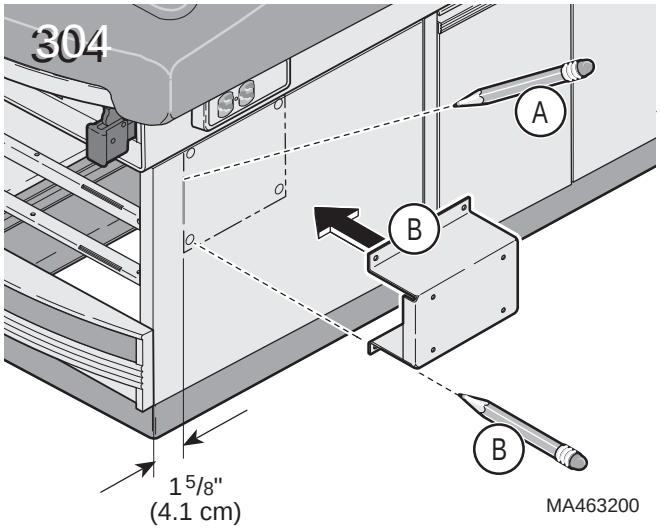

NOTE

The following steps are for mounting 9A18000X bracket.

A. Mark reference line 1 5/8” (4.13 cm) from foot end of table on patient’s left front support panel.
B. Position edge of bracket on reference line so the edge of bracket is even with top edge of support panel and mark location of bracket mounting holes.

© Midmark Corporation - 1998

INSTALLATION (4) (9A180)

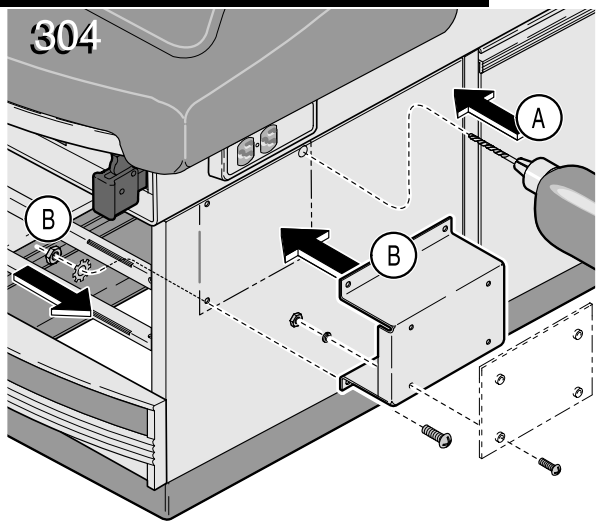

MA463301

A. Drill four 7/32” holes at location marks.

B. Install 9A180 bracket using four #10-24 x 3/8” screws, starwashers and nuts.

NOTE

When mounting the Welch Allyn universal light bracket *(not supplied with this kit)* the larger space between the bracket screw holes and the edge on the universal bracket must be positioned upward.

INSTALLATION (5) (9A91)

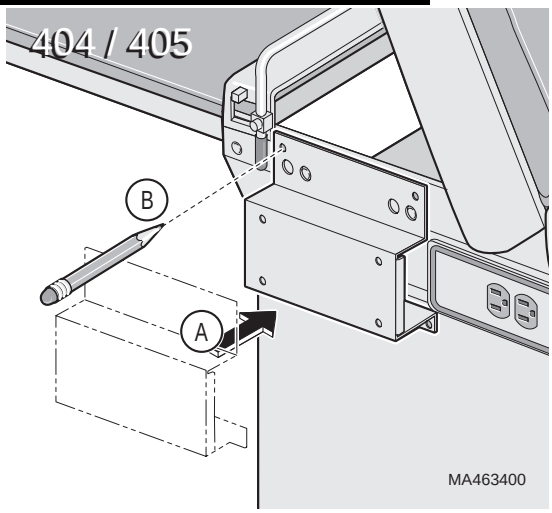

NOTE

The following steps are for mounting a 9A91002 bracket. The large holes in the mounting bracket should be over the spot welds on the upper wrap assembly.

A. Position mounting bracket on patient’s left front support panel so top edge of bracket is even with top edge of upper wrap and bracket’s top left corner against seat support.

B. Mark location of bracket mounting holes.

INSTALLATION (6) (9A91)

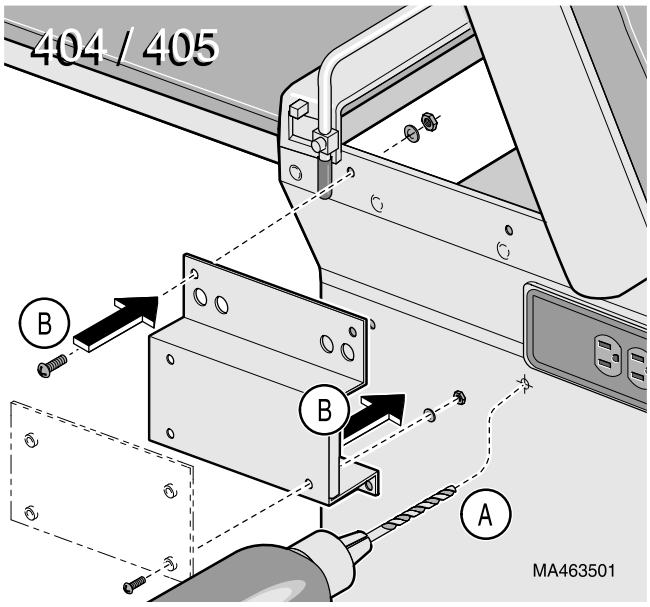

A. Drill four 7/32” holes at location marks.

B. Install 9A91 bracket using four #10-24 x 3/8” screws, lockwashers and nuts.

NOTE

When mounting the Welch Allyn universal light bracket *(not supplied with this kit)* the larger space between the bracket screw holes and the edge on the universal bracket must be positioned upward.

INSTALLATION (7)

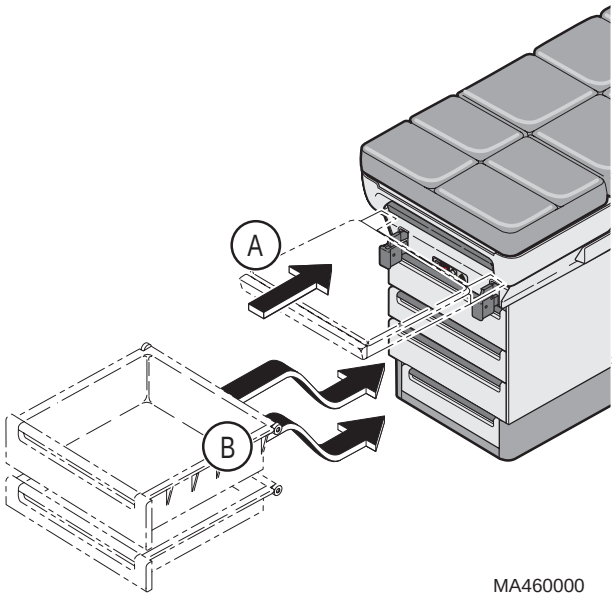

A. Push footrest in to stored position.

B. Install two top drawers and plug table into wall outlet.

MIDMARK®
Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

© Midmark Corporation - 1998